NT68E/U GNSS/WiFi/LBS Positioning

LOCK

- Push in the Rope/ Pole, device ready to be locked, BLUE Lock LED on:
- In 1st status, device can be locked by IC card/BLE/SMS/Platform;
- After device locked successfully, the buzzer will beep and a voice will prompt "Lock success"(only Europe Version), RED Lock LED on;
- If do not push in the Rope/Pole head, the buzzer will beep for 3 times and a voice prompt "Lock failed: please insert the lock rod".

UNLOCK

- When device is locked, it can be unlock by IC card/BLE/SMS/Platform:
- lf unlock successfully, the buzzer will beep and a voice prompt "Unlock success" and
- BLUE Lock LED on;
- Pull out the Rope/Pole, GREEN Lock LED on.



Real time tracking

RFID IC reader









APPEARANCE



Front



traQpro technologies Pvt Ltd